

BEAM CLAY®
 Rubber Base Anchor System

WHOLESALE PRICE LIST
 EFFECTIVE: JANUARY 1, 2018

Pre-Assembled Rubber Base Anchor System


No Muss .. No Fuss!

Fast Alternative to Concrete Installation

PABF 175

1 3/4" Steel Female Anchor Stem
 for Hollywood, MacGregor and many others with 1 3/4" female base anchors
#PABF 175/1 Singles


\$39.95

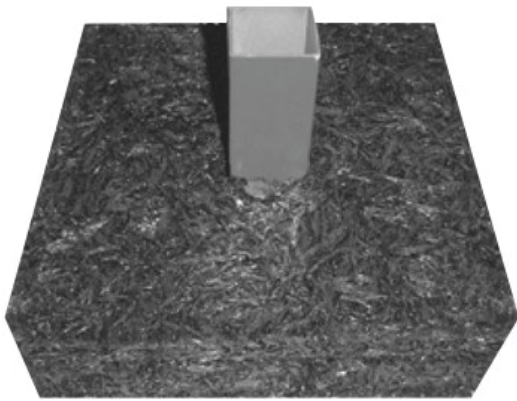

- A quick and easy way to set your base ground anchor without using concrete.
- Just bury and tamp in place. You are ready to insert base and play.
- Set includes recycled rubber platform with built-in male or female anchor stem.
- Pre-assembled with anchors in place.
- Heavy duty recycled rubber base. 10" x 10" x 3" (7 lb.)

**Sets of 3 are
 BEST VALUE!**



\$105

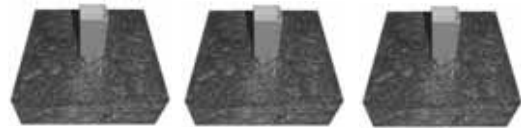

**#PABF 175/3 Set of 3
 with FREE Base Plugs**

**Installing Bases: the MarkSmart™ Way
 ...with Pre-Assembled Base Foundations (PABF)**


Steps to Fast, Easy, Accurate Base Installation:

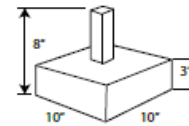


1. Determine the appropriate Field Layout. See Table below. All infield distances are measured from the point of Homeplate to the outer corner of 1st and 3rd base and center of 2nd base.

IMPORTANT FIELD DIMENSIONS


A Base Distances	B HP to Pitch Plate	C HP to 2nd Base
90 ft	60 ft 6 in	127 ft 3-3/8 in
70 ft	50 ft	99 ft
60 ft	46 ft	84 ft
50 ft	38 ft	70 ft 8-1/2 in

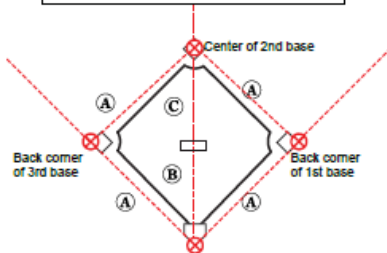


2. Dig 20" diameter hole no less than 10" deep for each base. Create a firm foundation using crushed stone or Baseball Clay at bottom of base. We suggest a minimum of 1 to 1-1/2" of material. Foundation should be tamped and leveled.

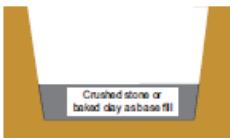

3. Place PABF anchor on leveled material. Center of PABF should be 7.5" from String Line and 7.5" toward Homeplate. Recheck and make sure PABF is level

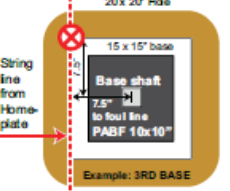

4. Backfill hole around PABF up to field level. Note: Top of Anchor should be 1" below field level. Rubber or Feathered Base Plugs are recommended if Base is not in place.

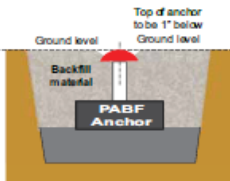

ALL PRICES SUBJECT TO CHANGE & AVAILABILITY PLUS SHIPPING