
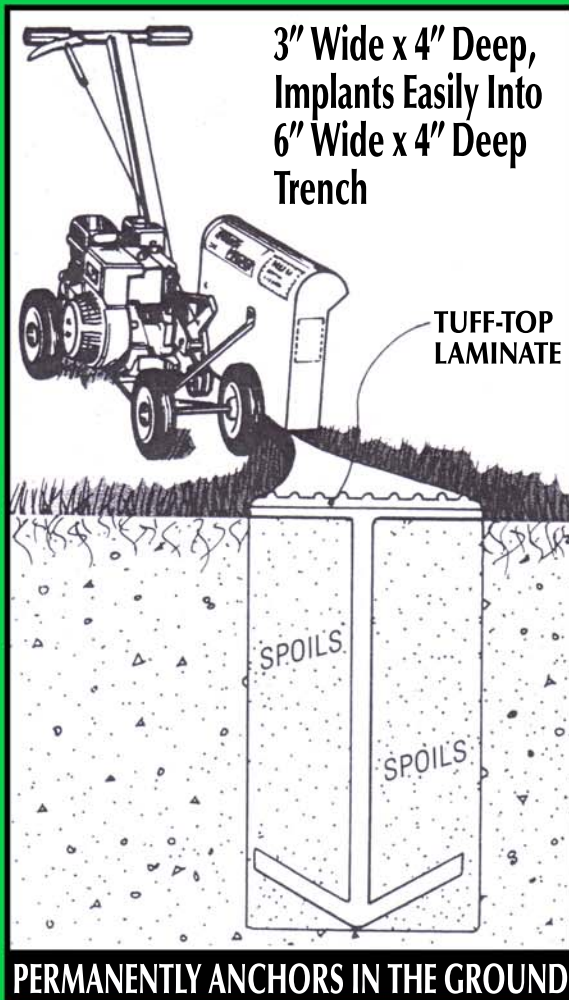


PERMANENT FOUL LINE

INSTALL ONCE AND NEVER LINE AGAIN


FEATURES:

- WHITE VINYL SURFACE WITH STRONG PVC BODY, UV RESISTANT, NON-SKID RIBBING, STAYS WHITE YEAR AFTER YEAR.
- UNIQUE ANCHORING DESIGN SECURES LINES TO GROUND AND WITHSTANDS CLIMATIC CHANGES WITHOUT USING ANCHORING STAKES
- CONNECTOR AND 90° ANGLE CLIPS ALLOW UNLIMITED "ONE PIECE" EXTENSION.
- SAVES LABOR AND TIME.
- NEAT, CRISP, WHITE LINES YEAR ROUND, IN WET OR DRY WEATHER.

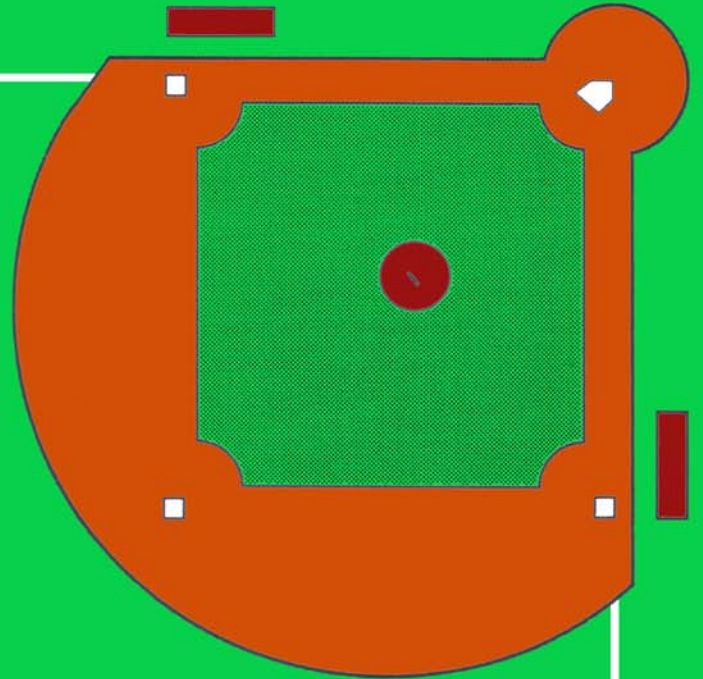

**FOR GRASS AREAS ONLY.
MUST BE INSTALLED & MAINTAINED
FLAT WITH GROUND.**

PERMANENT FOUL LINE comes in 20' sections, each with one connector and two 90° angle clips, Assemble with PVC adhesive.

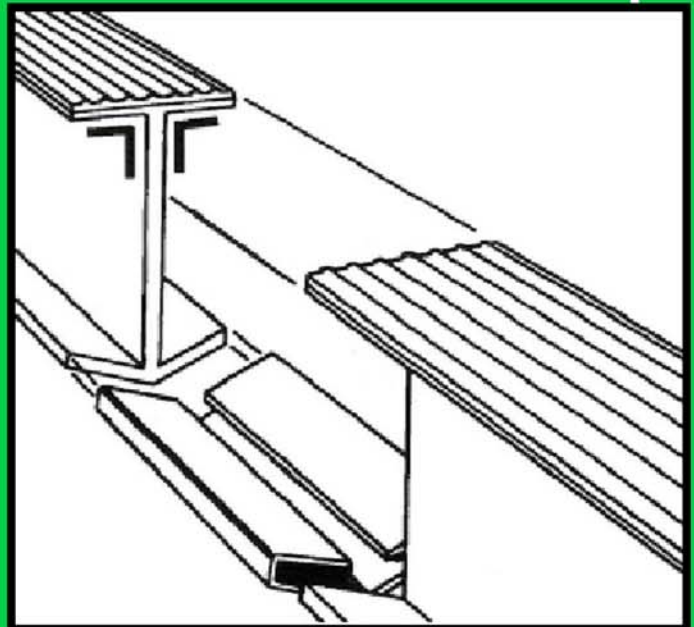

YOUR "ONE-STOP SOURCE" FOR AMERICA'S BASEBALL SURFACES & SUPPLIES!

800-247-BEAM (2326) • 908-637-4191 • www.BEAMCLAY.com • FAX 908-637-8421

PARTAC PEAT CORPORATION, KELSEY PARK, GREAT MEADOWS, NJ 07838

RECOMMENDED PROCEDURE FOR PERMANENT FOUL LINE INSTALLATION

1. Run a string from home plate to outfield corner.
2. Using a marking material (spray or dry marking compound) run a line.
3. Remove string and trench along line. The trench should be 4"-5" deep and width is whatever the trencher provides, but 5"-6" is preferred. If the trench is done by hand, the width of a shovel or spade is fine. Width is not important since the trench will be backfilled and it is easier to get a straight **PERMANENT FOUL LINE** when there is enough room to adjust the line. Remember, the foul line is in fair territory in baseball, so the string is the guide for the outside (foul territory side) of the **PERMANENT FOUL LINE**.
4. Remove material dug out for trench.
5. Using the material dug out, lightly backfill the trench to a 3-1/2" depth.
6. Rerun the string.
7. ***CRITICAL*** - Layout the 20' sections of **PERMANENT FOUL LINE** right next to the trench. Assemble the 20' sections of **PERMANENT FOUL LINE**, using the connectors and 90° angle clip pieces at each joint. PVC adhesive should be used for the 90° angle clips and for the connectors, allow enough time for the adhesive to set up. This assembly should be done so the **PERMANENT FOUL LINE** is right next to the trench. It is easier to assemble the sections upside down, with the flat top laying on the ground and the arrow sections pointing up.
8. ***CRITICAL*** - Install the **PERMANENT FOUL LINE** into the trench using the foul line string as the guide. Tap the top of the **PERMANENT FOUL LINE** so it is embedded into the dirt with the arrow shape bottom straight down and the top flat with the ground level. The **PERMANENT FOUL LINE** should be both flat and straight at this time. A little extra time here makes the installation easy with quality results.
9. Backfill with the material dug up previously. This is the important part of the installation and care should be taken to have the line perfectly straight, so difficult adjustments after backfilling can be prevented.
10. Carefully return backfill material into the trench until the **PERMANENT FOUL LINE** is quite secure, approximately ½ of the **PERMANENT FOUL LINE** covered.
11. With a hose wash the rest of the backfill material into the trenched area. Do so in several stages, so as to get a fairly uniform backfilling operation.
12. Allow the backfill to set up slightly. Recheck position of line. Care should be taken to be sure the soil is still wet for corrections. Do not drive the **PERMANENT FOUL LINE** deeper than ground level so water and dirt will stand on the line. If during installation the line gets too deeply set, wet the area and pull the **PERMANENT FOUL LINE** up to the desired height. After the adjustment, wet the area thoroughly and allow to set up again.
13. **IMPORTANT:** The **PERMANENT FOUL LINE** is made only for use in turf areas, not for skinned areas where it would be a hazard for sliding. **PERMANENT FOUL LINES** should only be used in the outfield grass areas. Care must be taken to insure that the **PERMANENT FOUL LINE** remains flat with ground level. At the beginning ends behind 1st and 3rd bases, slightly taper **PERMANENT FOUL LINE** into ground so as to not be a hazard for players or to cause ball hops.

YOUR "ONE-STOP SOURCE" FOR AMERICA'S BASEBALL SURFACES & SUPPLIES!

